



RAMI, Inc.
Grand Haven, MI 49417
(616) 842-9450
www.rami.com

AV-200& AV-200(-B)
ELT Antenna for General Aviation

Frequency Range: 121.5/406 MHz

Installation Instructions

- 1.) Mounting location should be on the top of the aircraft at least 24" from any other metal protrusions. Typically mounted aft of passenger/ baggage area and forward of vertical stabilizer.
- 2.) Drill mounting hole (see options below) through the aircraft skin at desired location. Remove all burrs from around edge to allow proper seating of moisture seal.
- 3.) Disassemble antenna by removing the hex nut and lock washer as show in the illustration.
- 4.) Insert the antenna through the mounting hole from the outside of the aircraft.
- 5.) Slide the lock washer over the BNC connector of the antenna from the inside of the aircraft. Thread the hex nut onto the BNC connector and tighten securely.
- 6.) Connect the antenna to the ELT using a cable with a BNC type connector attached (not supplied).

The conditions and tests for TSO approval of this article are minimum performance standards. Those installing this article, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only according to 14 CFR part 43 or the applicable airworthiness requirement.

