



RAMI, Inc.
Grand Haven, MI 49417
(616) 842-9450
www.rami.com

AV-64 MARKER BEACON (BOAT TYPE)

Frequency: 75 MHz

Installation Instructions

- 1.) Locate mounting position on flat surface of the aircraft fuselage belly.
- 2.) Using the template provided, drill two mounting holes, one hole for the connector and one hole for the adjustable capacitor.
Note: Be sure to mount correctly using the "Front of Aircraft" noted on the template.
- 3.) Mount the antenna by placing the rubber pad provided between the antenna base and the aircraft fuselage. Insert hardware provided as shown below and tighten securely.
- 4.) Using RG-58/U cable or similar 50 ohm coax cable (not supplied), attach a BNC type male connector to the antenna end of the cable. Terminate the other end of the cable with a suitable connector to mate with the marker beacon receiver.

